

Cabinet Base Sealant Plus

804675 - 2.5L

Description:

Cabinet Base Sealant Plus is a new-generation cabinet base sealant that makes sealing faster and safer on site. It delivers the proven performance of our traditional two-part systems, with a newly reduced hazard profile.

The solution will seal everything from telecom cabinets, feeder pillars, lighting columns, traffic control systems, and LV enclosures. It protects against all manner of ingress while remaining fully re-enterable for future maintenance.

With this two-part solution, ingress protection is achieved rapidly. Unlike some one-part alternatives that can take months to fully cure on-site, our “Plus” cabinet base sealant sets in around 20 minutes.

Installers get a solution that is easily installed, delivers rapid results, and offers long-term sealing performance. All with a non-hazardous product that comes without the handling concerns associated with conventional systems.

FILOform’s Cabinet Base Sealant Plus is an updated, lesser-label alternative to our existing Virgin Media approved solution.



Features:

- **Environmentally responsible formulation using non-hazardous ingredients**
- **Easily re-enterable for future maintenance**
- **Can be applied in wet & damp conditions – no cement dust needed**
- **Good flow properties with self-levelling characteristics**
- **Smooth and non-tacky surface**
- **Accurate filling process when pouring the resin – with a rapid set time of 20 minutes**
- **Prevents ingress of moisture, pests and the intrusion of weeds, roots and plants**
- **Improves the climate inside the street cabinets and transformer stations**
- **Decreases interference of the equipment and extends overall asset life**

Specifications:

Properties	Unit	Value
Potlife (process time) 5°C	minutes	90
Potlife (process time) 23°C	minutes	75
Potlife (process time) 35°C	minutes	60
Gel-time	minutes	120
Viscosity (mixture) 25°C	Pa.s	1
Density	g / cm ³	1.3
Hardness	Shore D	18
Water absorption (30/ 23°C)	%	<1.0
Weight loss 28d/120°C	%	0.8

Installation Guide:

Step 1: Prepare the base

Clear and clean the bottom of the cabinet. For optimal results, we recommend adding a levelled 5mm layer of kiln-dried sand. (Sand not supplied.)



Step 2: Mix the materials

Tilt the bag up and down to mix the resin for 2 minutes. Make sure to wear protective gloves when mixing and applying the resin.



Installation Guide:


Step 3: Prepare to pour

Insert and twist to secure the supplied pouring tube into the resin bag.



Step 4: Apply the sealant

Direct the pouring tube at the base of the cabinet and wait ~5s for the resin to flow. Apply evenly, making sure all the resin is used.

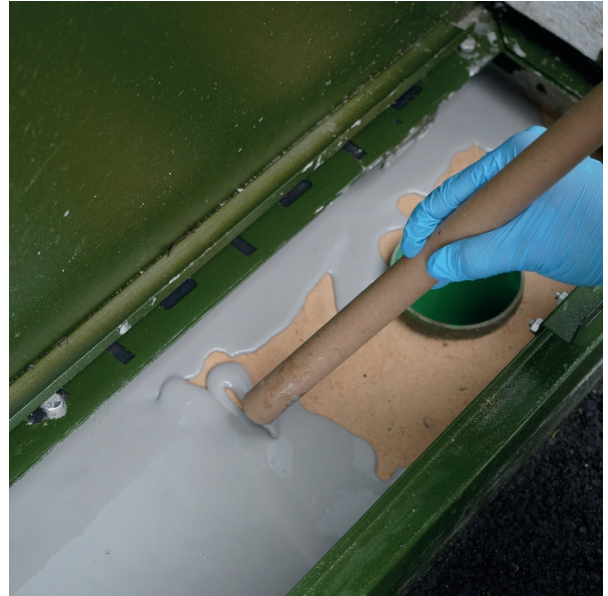

Step 5: Allow 20 minutes for the product to cure

The solution will fully set within 20 minutes – providing long-term ingress protection from the moment it cures.

